



SPARE PARTS MANUAL

LUGGIE ASCOT

FRM024AAUKNB


FR168-4A(12AH)



INDEX

1. HANDLEBAR ASSEMBLY	P.4
2. CHASSIS COVER AND BATTERY ASSEMBLY	P.6
3. CHASSIS ASSEMBLY	P.8
4. DRIVE SYSTEM	P.10
5. STEERING	P.12
6. SEAT ASSEMBLY	P.14
7. CONSOLE AND WRING SYSTEM	P.16


1. HANDLEBAR ASSEMBLY

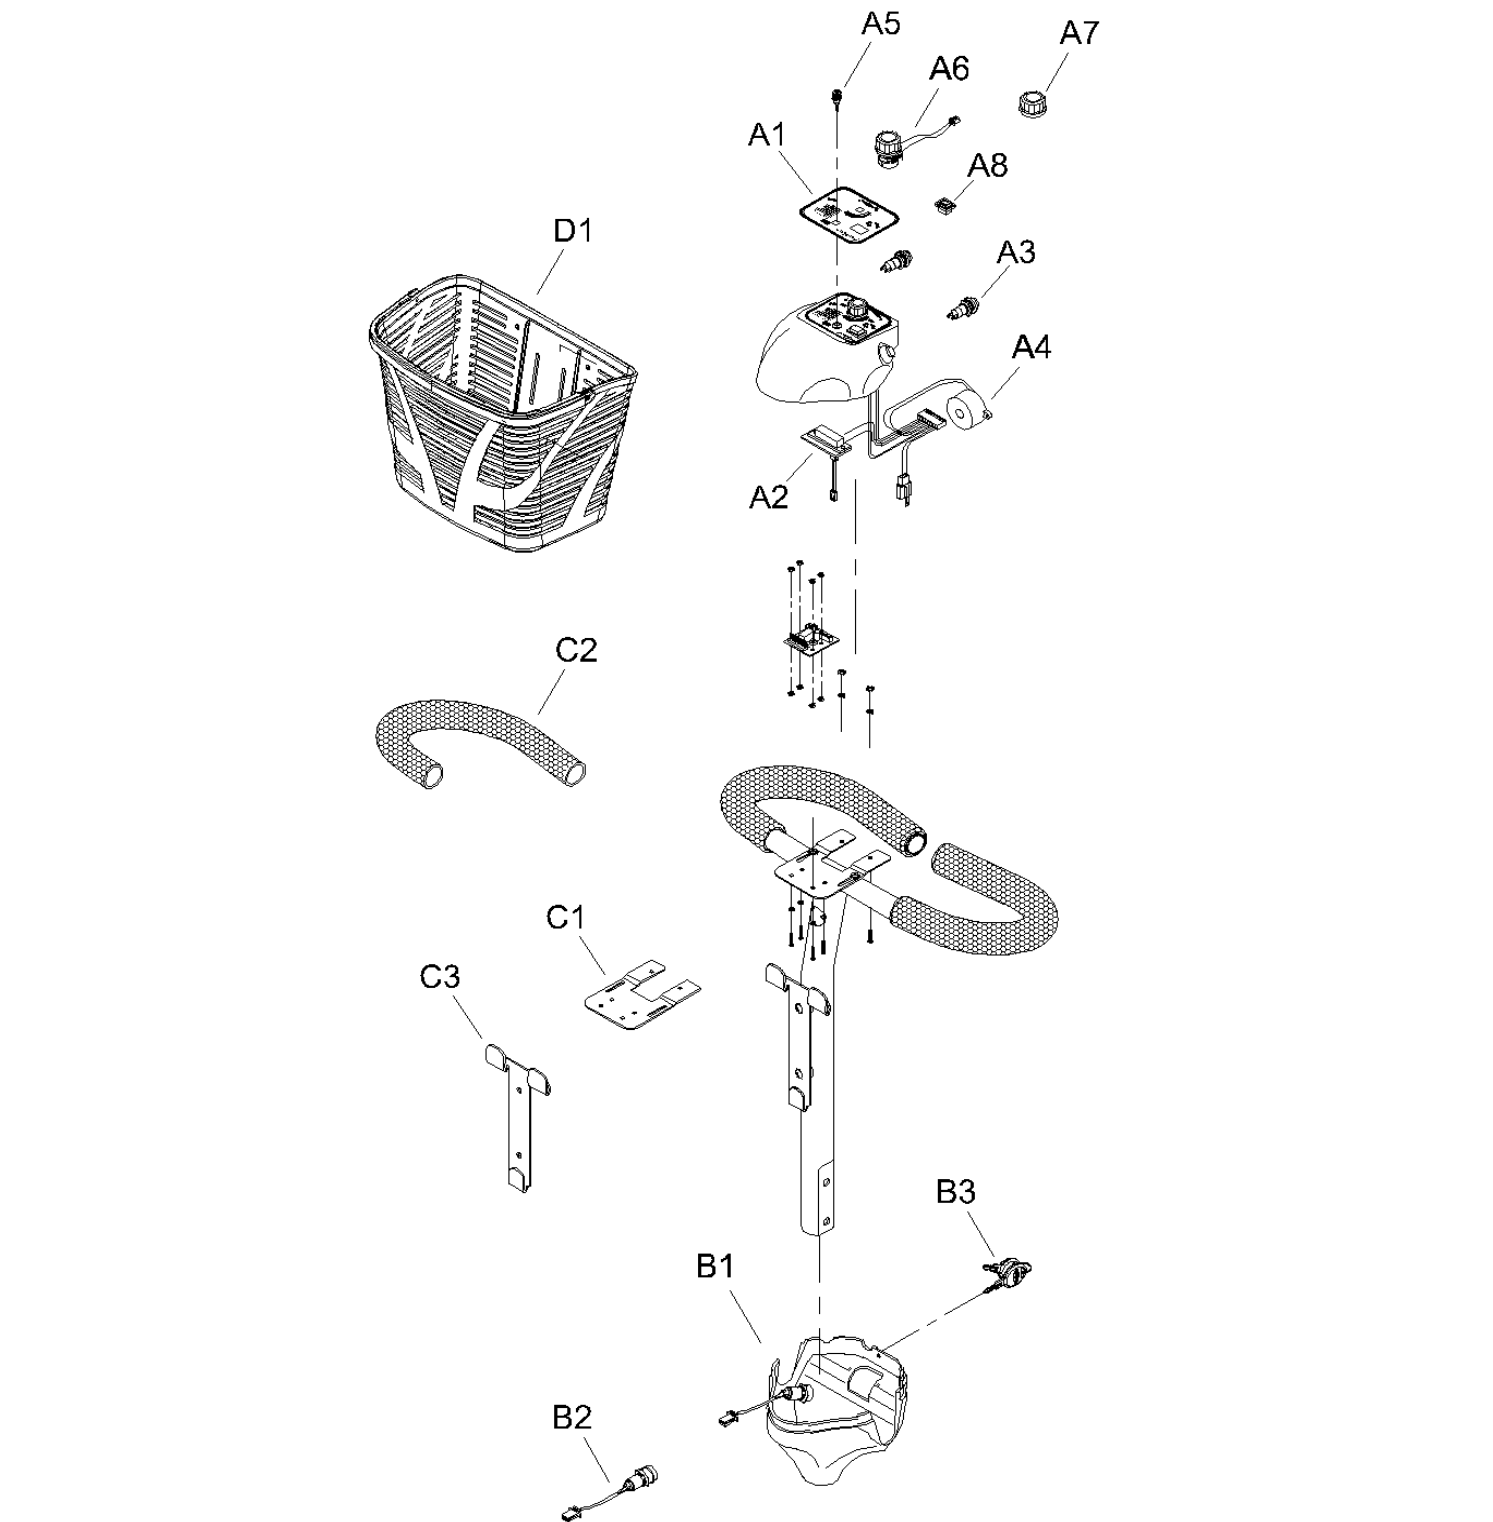

1. HANDLEBAR ASSEMBLY

[illegible]


2. CHASSIS COVER ASSEMBLY

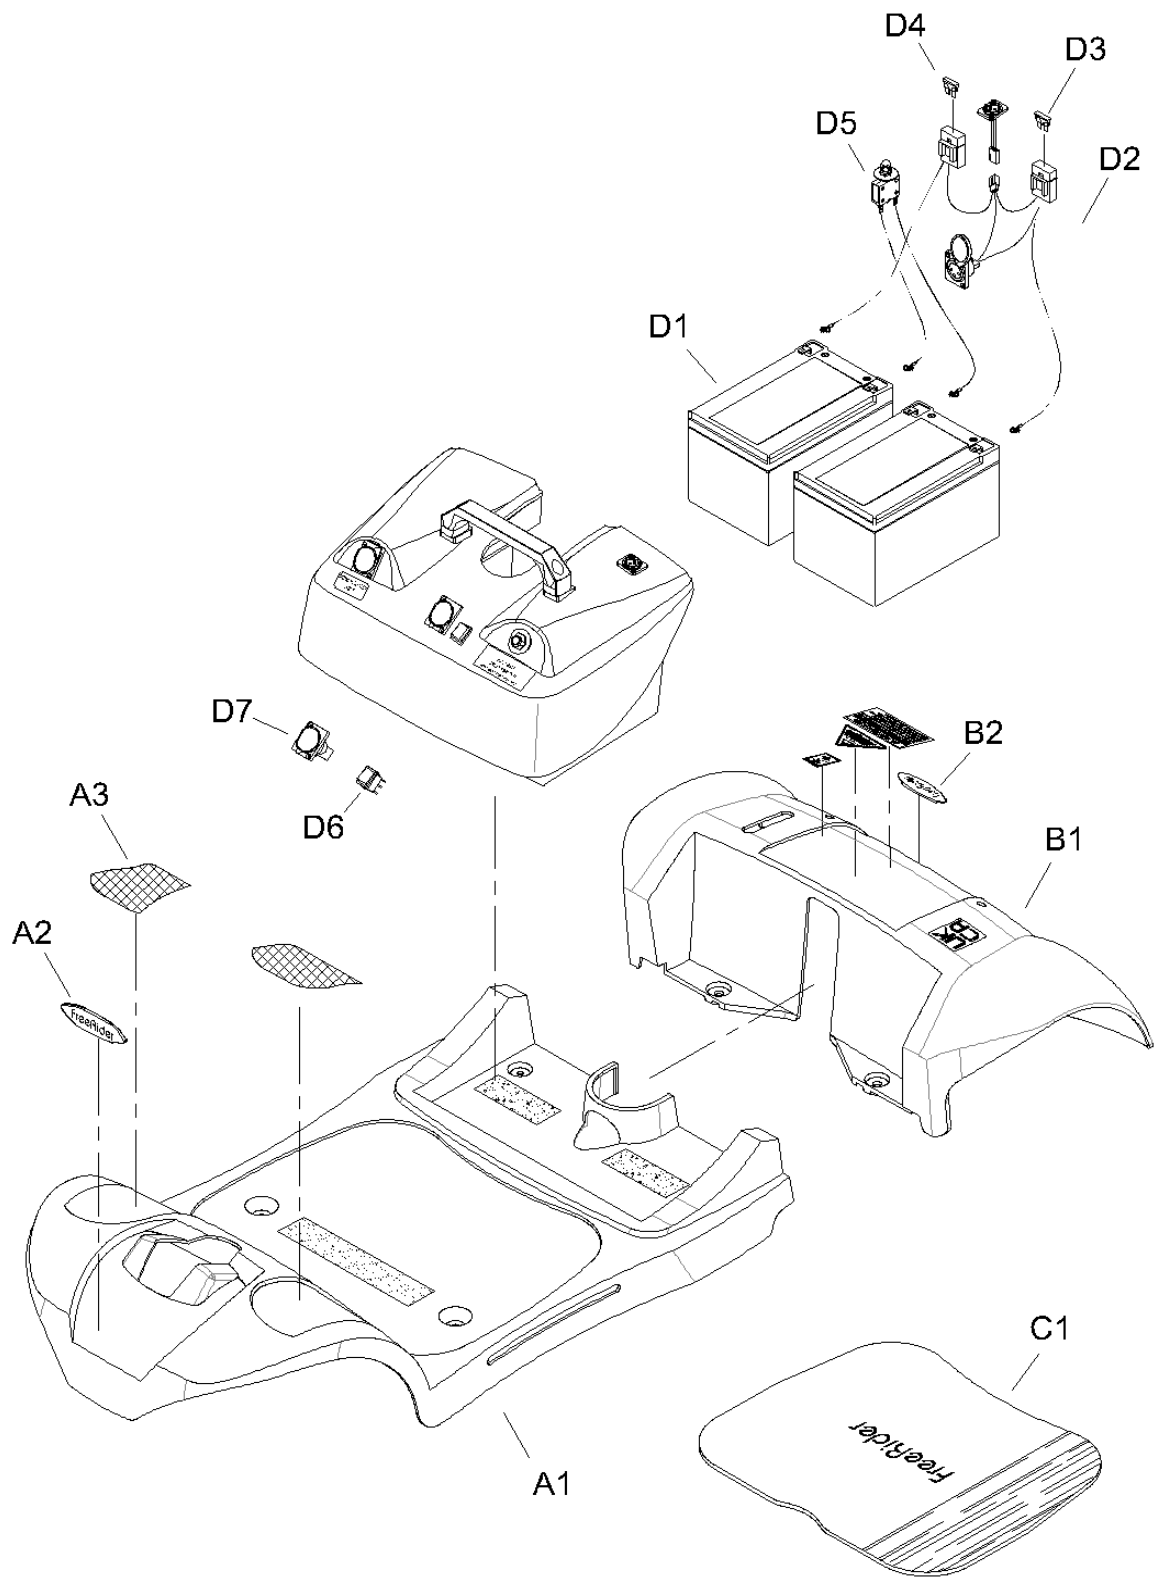

2. CHASSIS COVER ASSEMBLY

[illegible]


3. CHASSIS ASSEMBLY

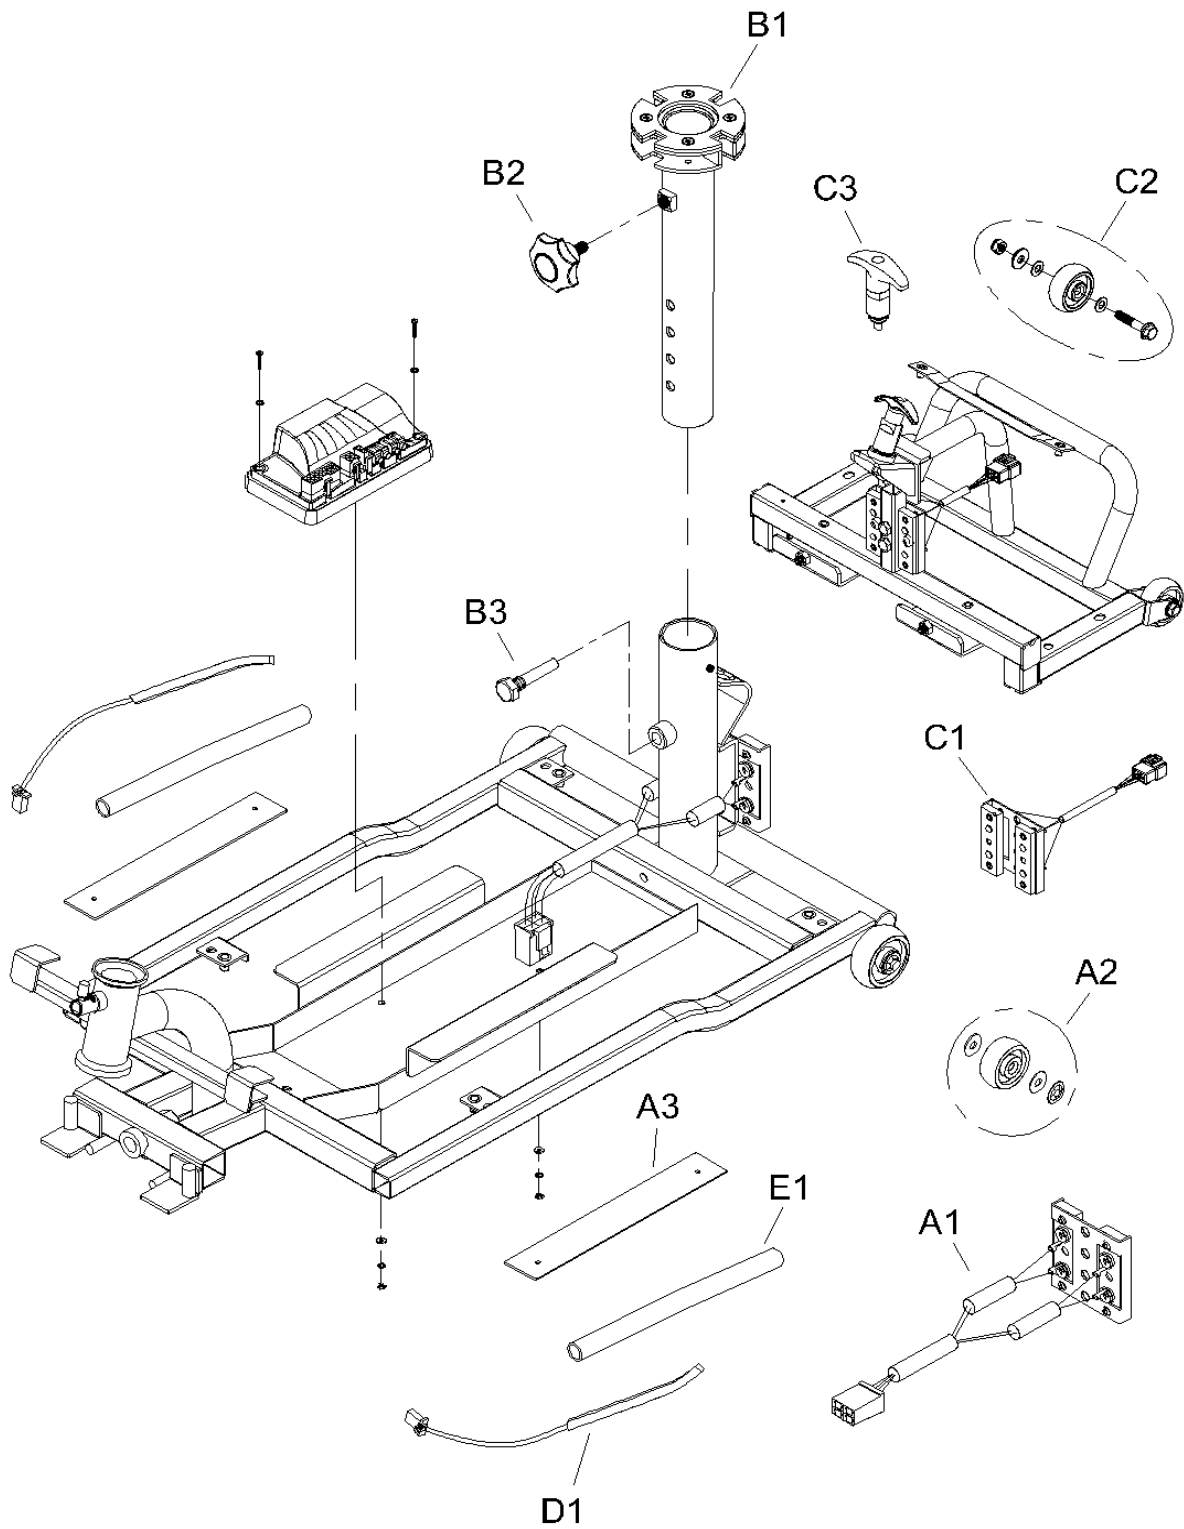

3. CHASSIS ASSEMBLY

[illegible]


4. DRIVE SYSTEM

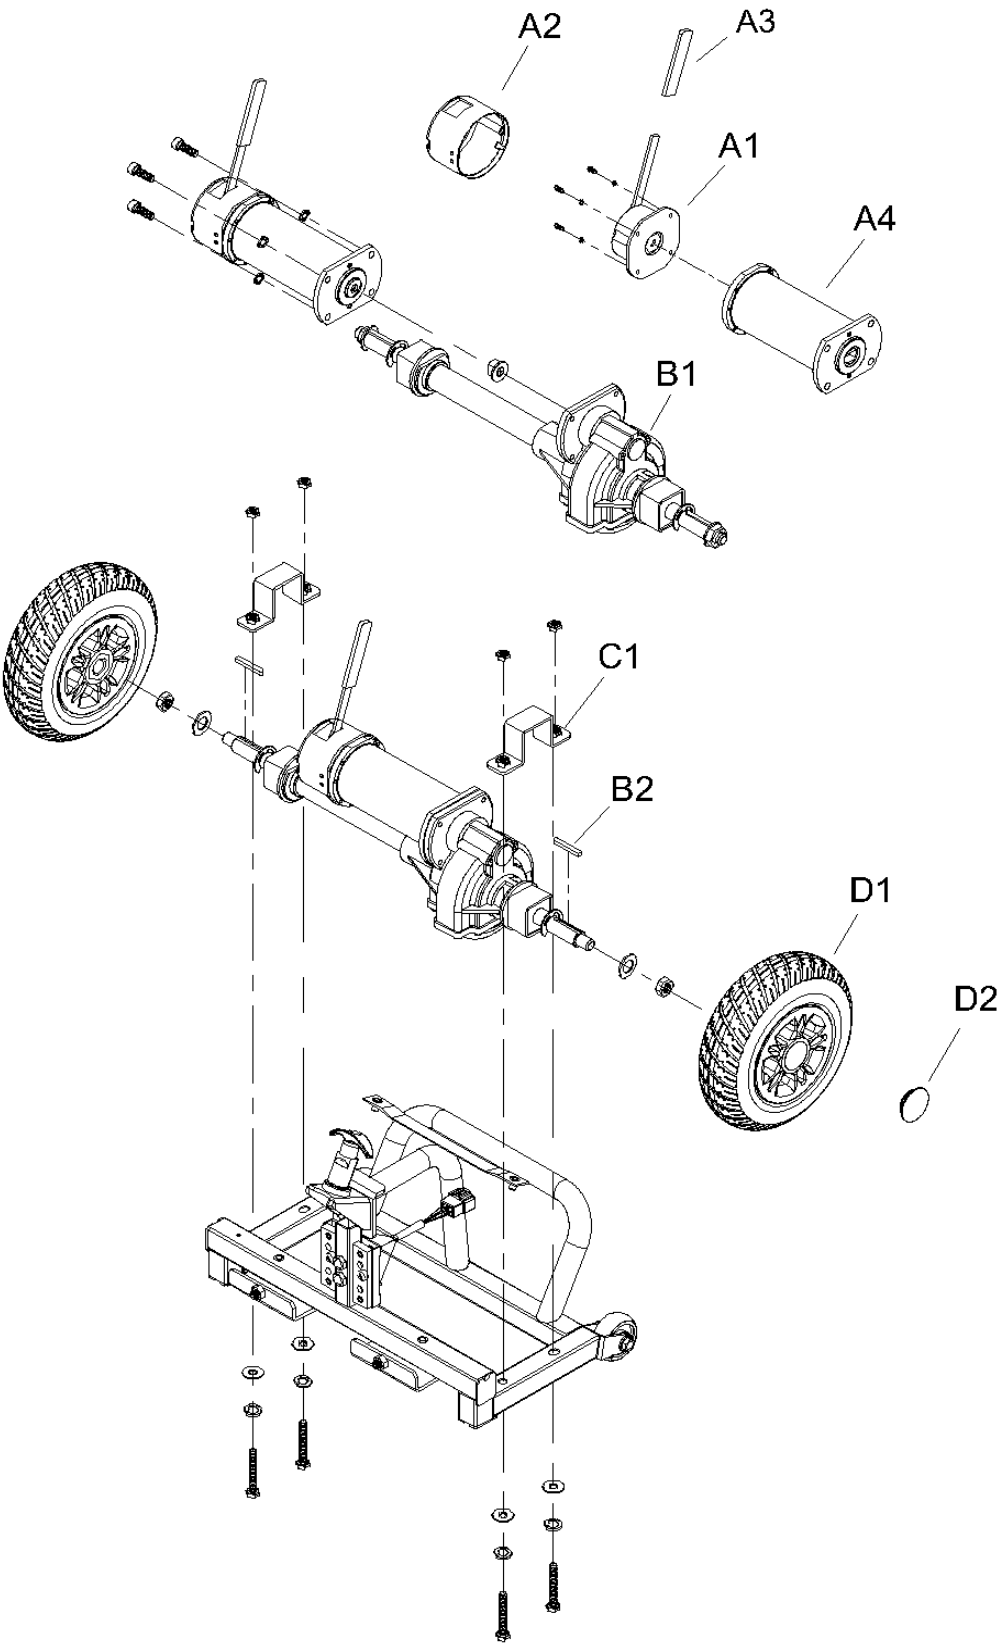

4. DRIVE SYSTEM

[illegible]


5. STEERING

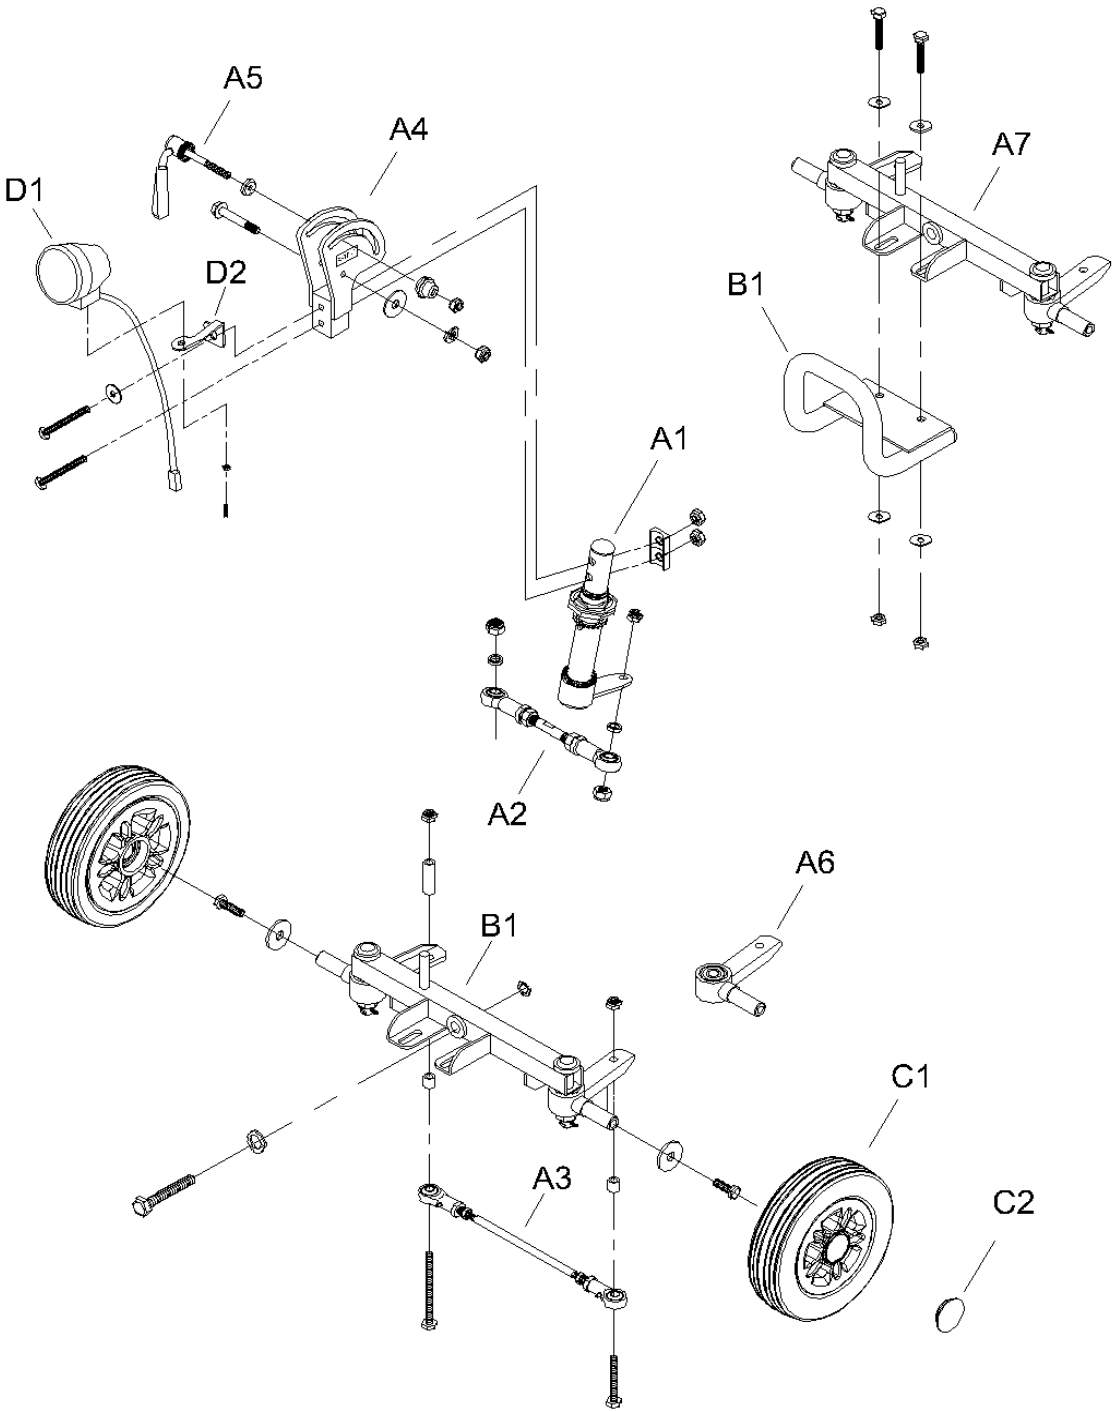

5. STEERING

[illegible]


6. SEAT ASSEMBLY

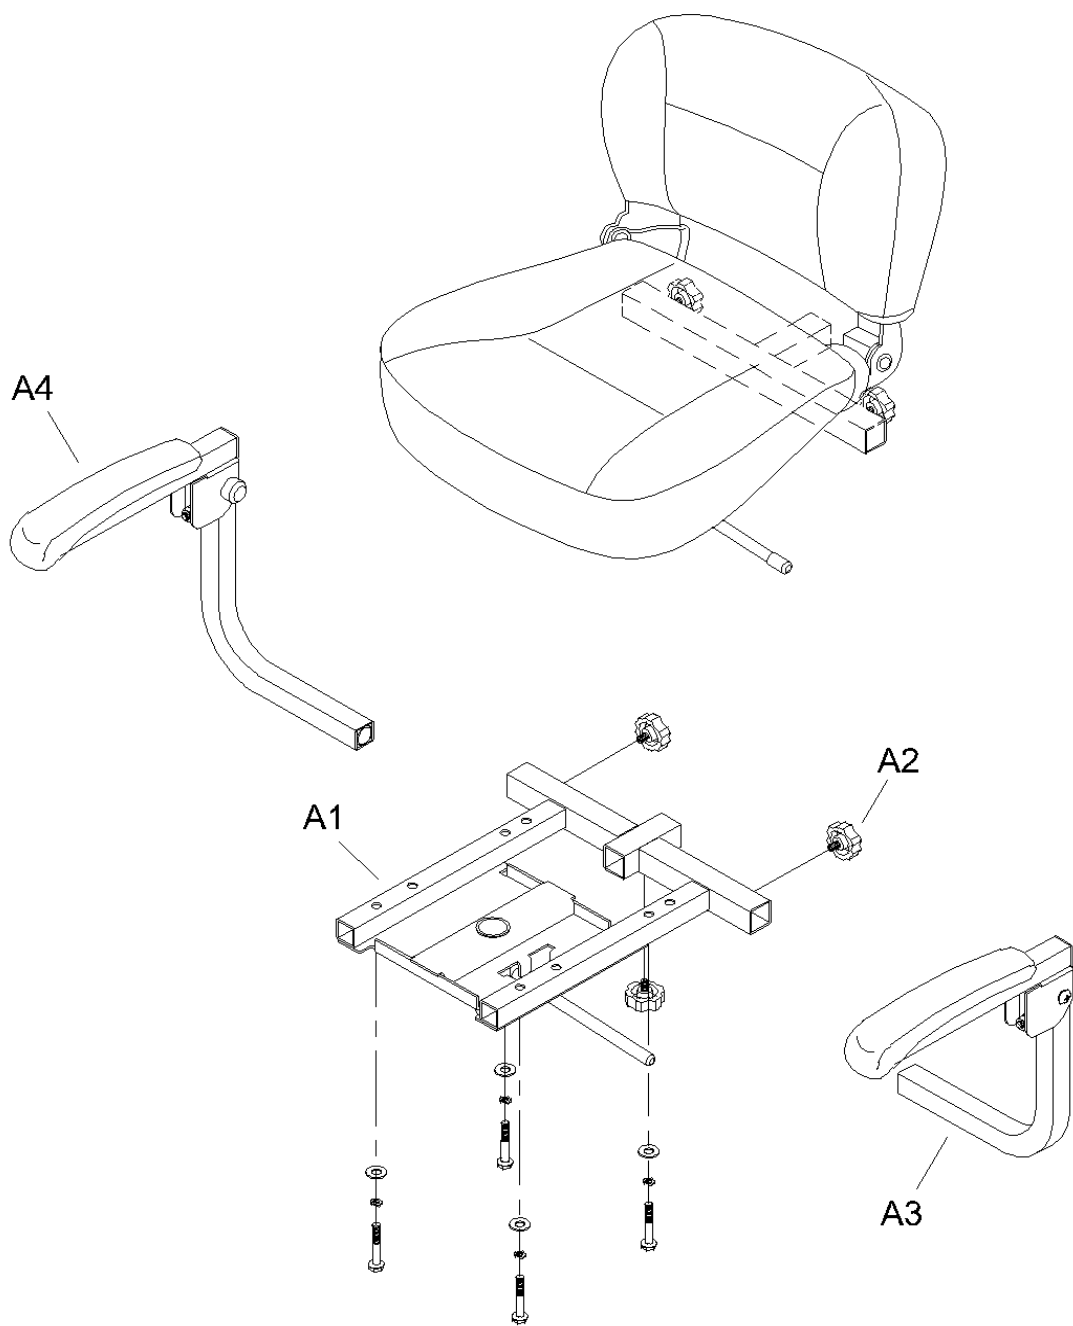

6. SEAT ASSEMBLY

[illegible]

7.CONSOLE AND WIRING SYSTEM

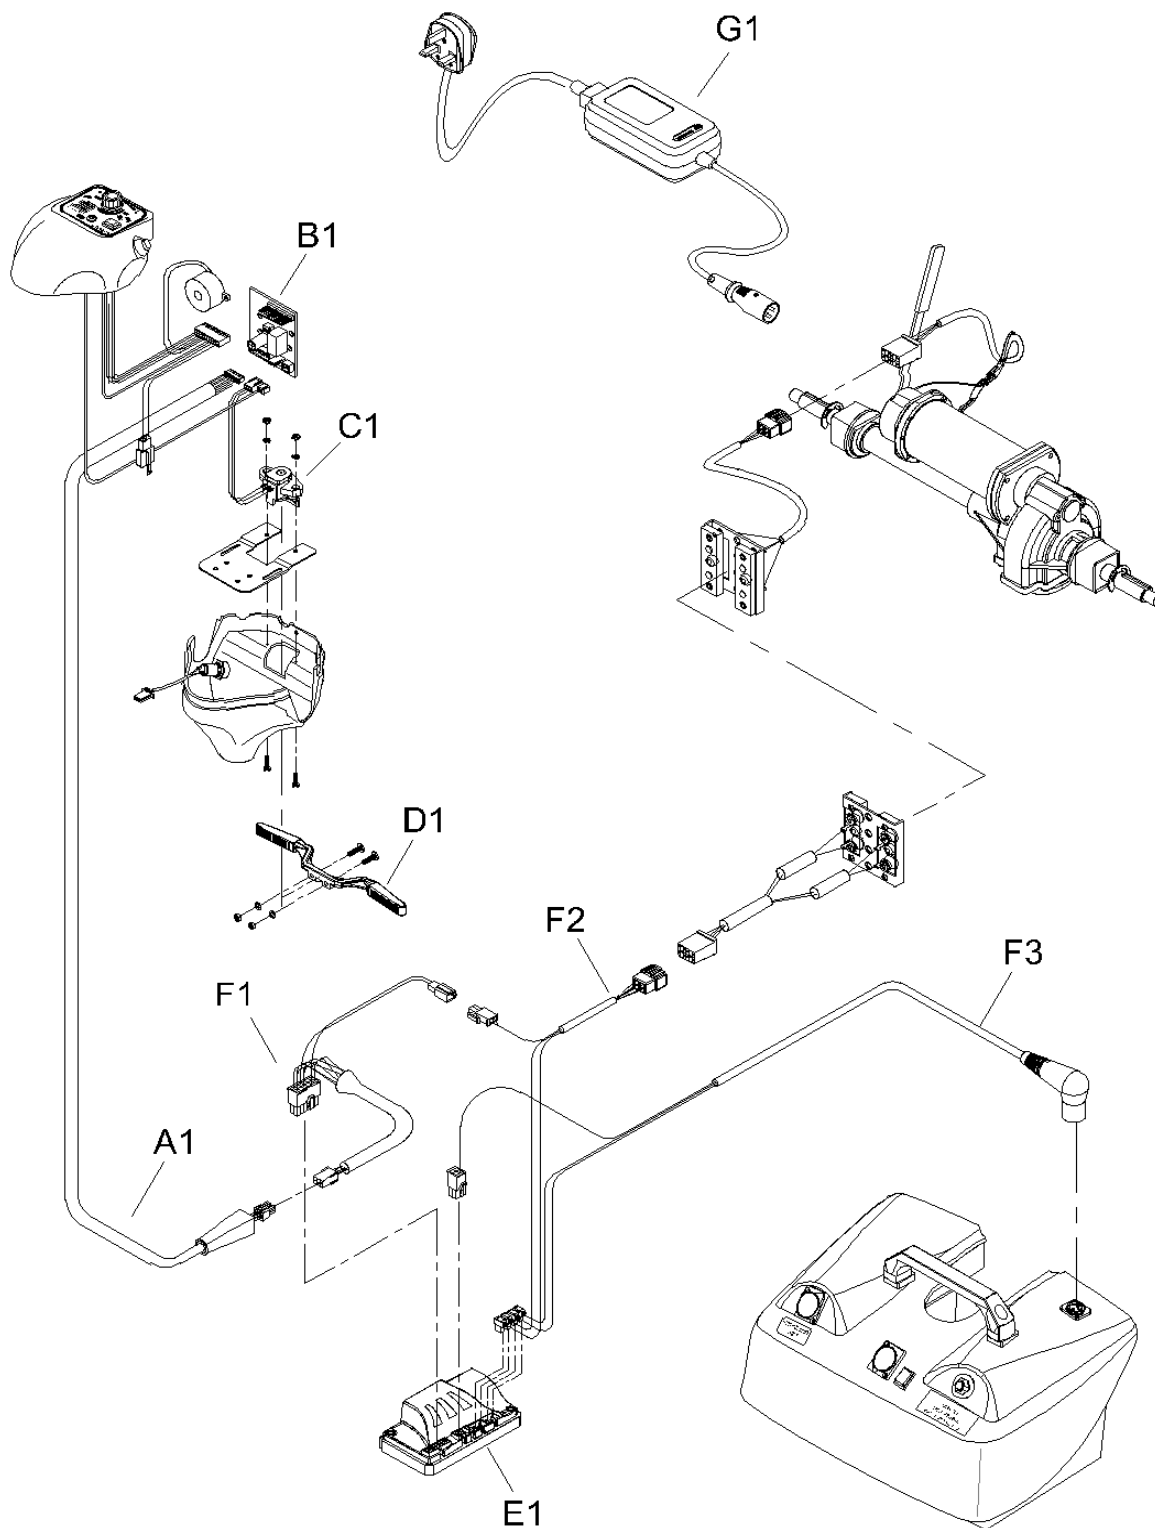

7.CONSOLE AND WIRING SYSTEM

[illegible]